


Retract the awning back to the fully closed position. Position yourself under the awning (not in front of the awning/arms).

While making the adjustment, have an assistant help support/press the awning arm.

Secure the inner, outer arms and valance to the entire awning with ties or straps.
(Electric awnings: Please disconnect the power source)

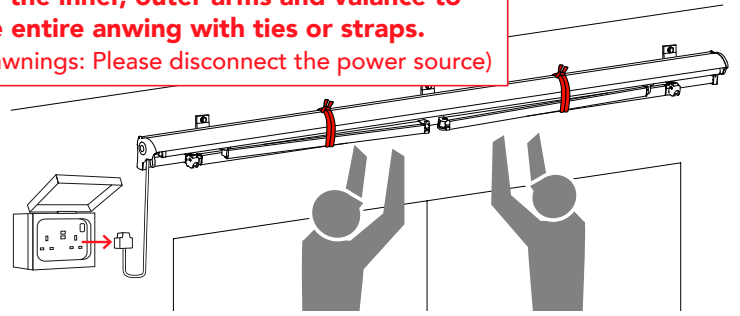

① **L Series Only:** Unscrew the 3 screws to remove the Cassette cover from the Cassette.



② Place the Cassette cover Gear Box set on a flat surface. Remove the 2 bolts from the Gear Box by using a size 3/16 Hex Key.



③ Remove the Gear Box from the Cassette cover. Lay the Gear Box on a flat surface.



④ Unscrew the 3 screws from the Gear Box with a screwdriver.



⑤ Remove the Gear Box cover. Keep all parts intact.



⑥ Lubricate the Gear Box threads. Place the Gear Box cover back on and secure with 3 screws.



Correct



Incorrect

⑦ Secure the Gear Box back to the Cassette cover by tightening with 2 bolts.

⑧ Attach the Cassette cover Gear Box set back to Cassette cover with the 3 screws.