


The awning arms contain tensioned cables. Always use caution, securely tie the awnings arms to the awning when performing installation, adjustments, or repairs. Sudden movement of tension arms can result in serious personal injury, product and/or property damage.

INSTALL POWER CORD FOR ELECTRIC MODELS

All electric models contain the motor on the **LEFT** side of the awning (when facing the awning)

- ① Plug into a GFI rated outdoor socket.
- ② Use a drip loop to avoid water collecting on electrical socket.

WARNING: DO NOT attempt to modify the plug in any way.

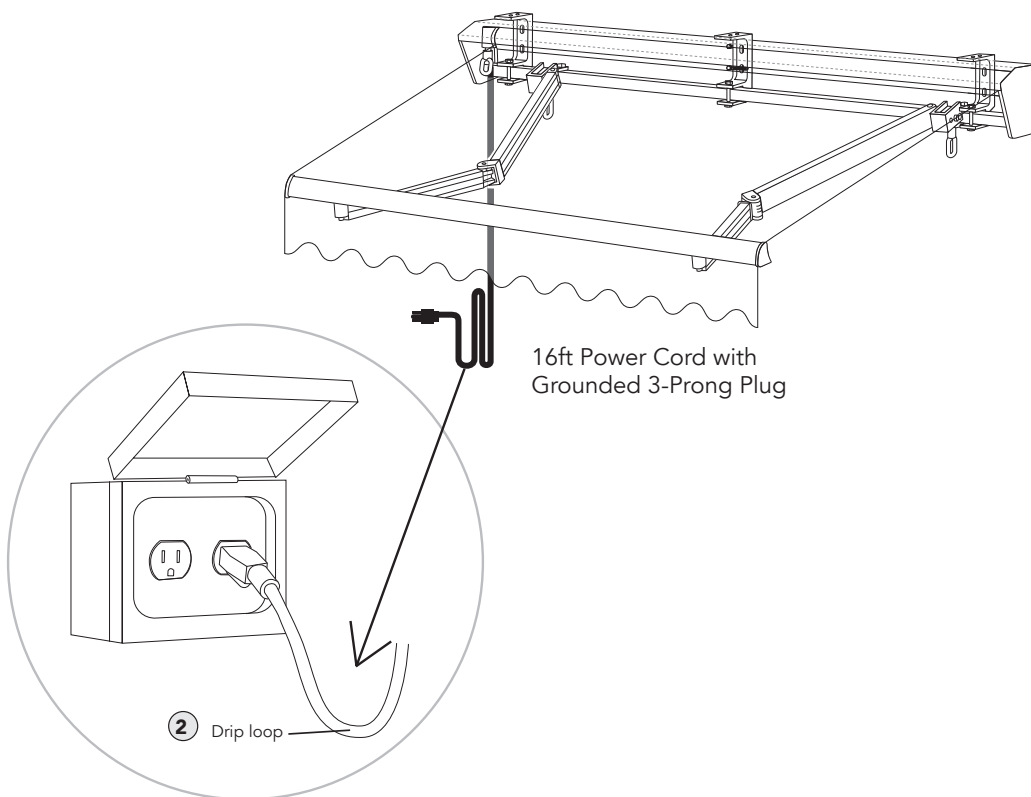

REMOTE CONTROL BATTERY REPLACEMENT

Remove battery cover from the back of the remote control and install the battery in the remote control.

