① Apply power to the awning
If the awning is currently plugged in, please unplug the awning and then plug it back in.

② Wait for tone:
Once plugged in, a 2 second steady tone will sound.

③ Press "P2" Button Twice
Once the tone ends, please press the "P2" button twice. A tone will sound with each pressing.

④ Press up or down
Choose the up or down button to set as "open" and press it. Once pressed, 7 short beeps will sound. Your awning is now ready to use.
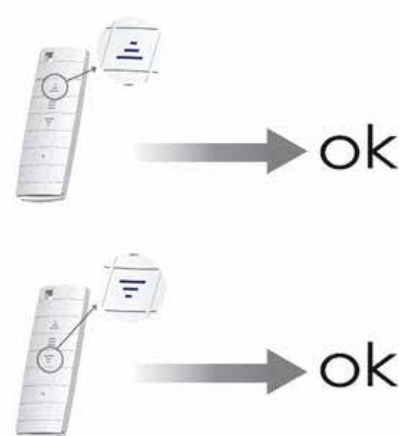
UP
Stop
Down

CAUTION
While in the synchronization process, holding down the up or down button for over 4 seconds will cancel the process.