


FS Series Reposition the Arm Rivet



ADVANING®

- ① Retract the awning back to the fully closed position.
- ② Position yourself beneath the awning (to secure the awning's arms when closed)
- ③ This is a 2-person job. The assistant secures the arms during adjustment
- ④ **Tools Required: Mallet, Pliers, rivet tool, sturdy free-standing ladder**

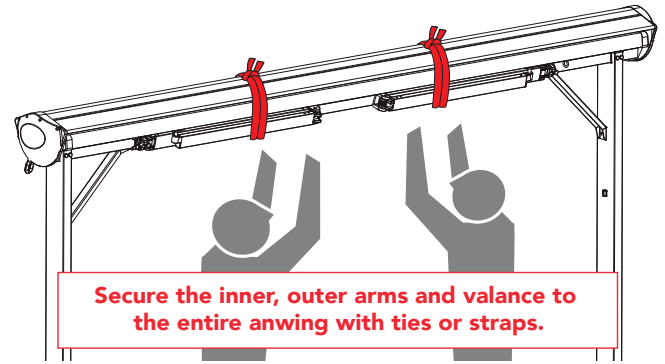

Installers Tip for Step# 5:

There may not be enough space between the bolt and cassette for a direct mallet strike. Insert a steel "flat" or "S" bracket (see illustration) and strike that to dislodge the bolt.

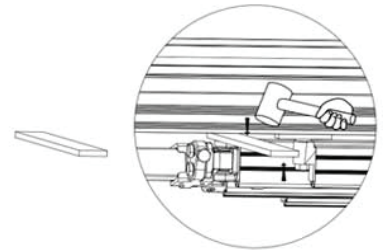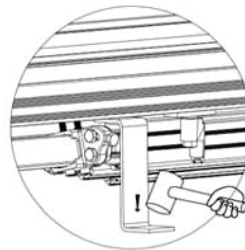

- ⑤ Tap in the bolt with a mallet from the top-down



- ⑥ Use pliers to remove the rivet from the bottom of the joint



- ⑦ Insert the new rivet (size $\text{Ø } 5/32 \times 1/2$ Inch)

- ⑧ Use a Rivet tool to remove the access pin

Our team prides itself on quality in product and service. Should you have any concerns or questions, do not hesitate to reach us at service@advaning.com. - www.advanning.com | Toll Free (US): (855) 574-0158