


Note: We recommend having an assistant to help during the replacement.

Electric Models: Please disconnect from power source before proceeding with arm replacement.

Preparation

1. Retract awning to its fully closed position.
2. Using a ladder, position yourself directly under the awning.
3. Secure all arms by wrapping them to cassette and around torsion bar with the rope or tie downs to prevent them from accidentally springing open.

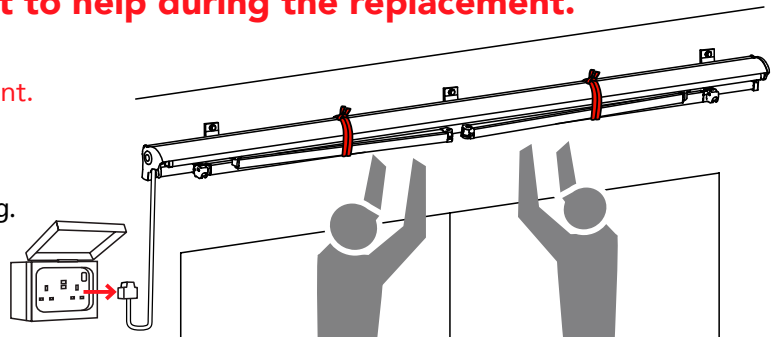

Before You Begin/What You Will Need:

- A. 1qty Phillips head screwdriver
- B. 1 to 2 qty 6ft-8ft Ladders
- C. 2 -4 qty 3ft Ties/Rope
- D. Replacement Cassette Cover (Left or Right)

1. Using the Phillips head screwdriver unscrew the four top screws from cassette cover.
2. Pull the cassette cover out.
3. Replace by aligning the cassette cover to torsion bar and under cassette.
4. Using the Phillips head screwdriver screw the four top screws.



Our team prides itself on quality in product and service.
Should you have any concerns or questions, do not hesitate to reach us at service@advaning.com.